

EVALUATION KIT FOR PAD20

EVAL20

Rev B

INTRODUCTION

The EVAL20 evaluation kit provides a convenient method to become familiar with the operation of the PAD20 operational amplifier before your application circuit is committed to production. Some assembly is required since user selections are needed depending on the application. For example, a current limit resistor value needs to be selected by the user. Also, there are several PCB mounting options available.

Critical connections for power supply bypassing and compensation are pre-wired. Fold-over current limit components are not provided since each application will have different requirements. Connections are also provided for diode clamps on each power supply and the output for those applications in which significant inductive kickback may be found. Terminal strips are also provided for input and output signals and power. Sockets are also provided for the optional PAD125 Current Limit Accessory Module as well as the PAD131 Fan Controller Accessory Module.

ASSEMBLY STEPS

Please note that the #1 cause of problems for evaluation kit users is not reading and following the directions (all of them). The #2 cause of problems is poor solder joints (cold or bridging). Don't become a statistic. ✓ each step.

Refer to the Illustrated Parts List for the components mentioned in the assembly steps. Note that some heavy PCB copper planes and some heavy component leads are soldered in this kit. This may require a larger soldering iron tip and/or higher soldering iron temperatures than might normally be used. These steps are marked with an asterisk (*).

□ 1. Notice that the printed circuit board (PCB) is labeled on one side as the "DUT SIDE" and the other side as "CIRCUIT" side.

□ 2. As shown in the illustrated parts list, one or more of PAD's accessory cage jack strip CJS01 was used in the assembly of this kit. It may be advisable to use the cage jack strips in your production circuit board as well. The CJS01 cage jack sockets provide a convenient and inexpensive socket. Soldering and/or de-soldering the amplifier from the circuit board can be extremely difficult due to the high thermal conductivity of the amplifier's pins and substrate. You can find the datasheet for the CJS01 on the PAD website under the "Accessory Modules" tab.

□ 3. Refer to "Jumper Selection" below the Circuit Diagram for the EVAL20 on page 4. Install the required jumpers at the locations indicated depending on the option you have chosen. Jumpers of various lengths are included in this kit.



Assembled EVAL20 with PAD20 installed. Optional PAD131 and PAD125 also installed.

Refer to the datasheet for the PAD20 for complete information on current limit options. Jumpers for option 1 are already installed. Remove and replace the jumpers as needed for the option you have chosen.

□ 4.* Six current limiting sense resistors, R_s , are provided. Two $0.47\ \Omega$, one $1.0\ \Omega$ and one $2.0\ \Omega$ are useful for the built-in current limit circuit. The $30\text{m}\Omega$ and $50\text{m}\Omega$ resistors are useful for the external PAD125 current limit circuit. There are four locations on the PCB for these resistors. The PCB ties all four of the locations in parallel. The resistors can be used individually at any location or several can be used to fine tune the final value desired. See the datasheet for the PAD20 and PAD125 to determine the best value for your application. Solder the resistor(s) from the "CIRCUIT SIDE" of the PCB.

□ 5. D3 and D5 are transient voltage suppressor diodes and are not supplied since the type (breakdown voltage) varies with the application. They are not necessary for every application. They are most commonly used in application circuits where kickback from the load may force the supply voltage above the limits of the amplifier.

□ 6. The evaluation kit PCB can be mounted in several ways. **Option 1- Chassis mount.** Use #6 standoffs and screws (not supplied) attached to the PCB at the four corners of the PCB.

Option 2- Bench-top mount. Use the rubber bumpers supplied. These are "stick-on" components. Remove the release paper from each bumper and apply the bumper to the square outlines on the "CIRCUIT SIDE" of the PCB.

Option 3- DIN rail mount. The PCB can be mounted to a 35mm DIN rail. For mounting the PCB to a DIN rail press the adaptors into the PCB in the holes at the edges of the PCB at locations 1 and 2 from the "CIRCUIT SIDE" of the PCB. Make sure that the plastic tines have fully spread out on the "DUT SIDE" of the PCB.

PowerAmp Design ♦ EVAL20 ♦ EVALUATION KIT FOR PAD20

□ 7. Components for locations R1-R7, D1, D2 are for the optional fold-over current limiting and are not supplied. Refer to the datasheet of the amplifier model to find out how to apply circuits that require these components.

□ 8. Remove the 4 hex nuts from the mounting spacers of the amplifier.

□ 9. Align the 4 studs of the mounting spacers with the mounting holes in the PCB. Be sure that the amplifier's pin 1 aligns with pin 1 on the PCB. Slowly lower the amplifier into the PCB, making sure that the pins of the amplifier and the cage jacks mate. Push the amplifier into the PCB until the mounting spacers meet the PCB.

□ 10. Fasten the amplifier to the PCB with the 4 hex nuts previously removed. Do not over-tighten the nuts as this may strip the mounting studs. The provided plastic nut starter can assist you here.

□ 11. If necessary, strip 1/8" of insulation from the wires connected to the fan. Twist and tin the wire ends. Insert the red wire into the cage jack labeled "+" and the black or blue wire into the jack marked "—" at the location marked "FAN". Or, if you plan to use the PAD131 Fan Controller Accessory Module, insert the fan wires similarly into the "+" and "—" cage jacks at the location marked "Fan Control". Do not solder the fan wires into the PCB.

□ 12. Use the bread-boarding area to add the external components necessary to program the amplifier gain and other circuit requirements to evaluate your application circuit. You can use the evaluation kit schematic and PCB views to map out your circuit.














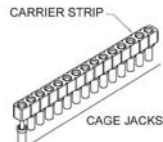

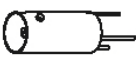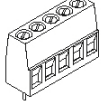□ 13. Remember that the amplifier must be compensated to operate correctly. See the amplifier datasheet on Page 4, under PHASE COMPENSATION. The selected phase compensation capacitor will be installed at "C_C" on the evaluation kit PCB. A 470pF capacitor has already been installed in your kit. Another value may better suit your application. Remove and replace the capacitor as necessary for your application. 47pF, 68pF and 220pF capacitors are also included with the kit. C_C must be rated for at least 200V. A temperature stable type capacitor is required—an X7R ceramic, for example, or NPO (COG) type.

□ 14. If you have chosen to use the PAD125 Current Limit Accessory module and/or the PAD131 Fan Controller Accessory Module install them at this time making sure that pin 1 on each module is aligned with the pin 1 marking on the PCB. Note that the PCB location for the PAD125 may be marked as PAD123 as the PAD125 replaces the PAD123. Additional programming of the PAD125 will be necessary. See the PAD125 datasheet for full details.

□ 15. The evaluation kit assembly is complete. Be sure you have read and followed all the assembly steps. Do not forget any jumpers that need to be installed. Inspect the circuit board for solder shorts or poor solder joints. An illuminated magnifier is helpful.


□ 16. Before applying power to your circuit set the power supply for $\pm 20V$ and set the power supply current limit to approximately 100mA. Use little or no load at first. Apply an input signal and check the output with an oscilloscope to verify proper functionality. This step can prevent damaging the amplifier or the circuit board should there be some mistake in assembly.

Note that the PAD20, PAD125, PAD131 are purchased separately.

✓	Ref	Qty	Description	Mfg/Distributor	Mfg. Part Number	Illustration (not to scale)
<input type="checkbox"/>	Amplifier Pins 1-22 + TP's	1	Cage Jacks w/carrier strip 32 wide	Power Amp Design	CJS01	
<input type="checkbox"/>	C1,2	2	Chip Capacitor, 1μF	Novacap	1825B105K201N	
<input type="checkbox"/>	C3,4	2	Electrolytic Capacitor, 150μF, 200V	Panasonic/Digi-Key	ECOS2DP151BA	
<input type="checkbox"/>	JP1	1	BNC Jack	AMP/Digi-Key	5221123-2	
<input type="checkbox"/>	JP2,3	2	Terminal Block	Phoenix/Digi-Key	1729157	
<input type="checkbox"/>	Cc	1	Capacitor, 470pF 200V	AVX/Mouser	CK05BX471KTR1	
<input type="checkbox"/>	Cc	1	Capacitor, 220pF 200V	AVX/Mouser	CK05BX221KTR1	
<input type="checkbox"/>	Cc	1	Capacitor, 68pF 200V	Cornell Dubilier/Mouser	CK05BX680K	
<input type="checkbox"/>	Cc	1	Capacitor, 47pF 200V	Cornell Dubilier/Mouser	CK05BX470K	
<input type="checkbox"/>	R _S	6	Sense Resistor	Xicon/Mouser Xicon/Mouser Xicon/Mouser Vishay/Mouser Vishay/Mouser	(2) 262-0.47-RC (0.47Ω) 262-1.0-RC (1.0Ω) 262-2.0-RC (2.0Ω) LVR01R0300FB12 (30mΩ) LVR01R0500FB12 (50mΩ)	
<input type="checkbox"/>	D4, 6	2	Diode, Fast Recovery	ON Semi/Digi-Key	MUR460RL	
<input type="checkbox"/>	NA	5	Rubber Bumper	3M/Digi-Key	SJ5518	
<input type="checkbox"/>	NA	15 (5ea)	Jumper	3M/Mouser	923345-01-C (0.1 in) 923345-02-C (0.2 in) 923345-03-C (0.3 in)	
<input type="checkbox"/>	NA	1	Nut Starter	Menda/Jensen Tool	200	
<input type="checkbox"/>	NA	2	35mm DIN Rail Adaptor	Scidyne	121-0014	
<input type="checkbox"/>	NA	1	PCB	Power Amp Design	EVAL20	NA

PowerAmp Design ♦ EVAL20 ♦ EVALUATION KIT FOR PAD20

CIRCUIT DIAGRAM

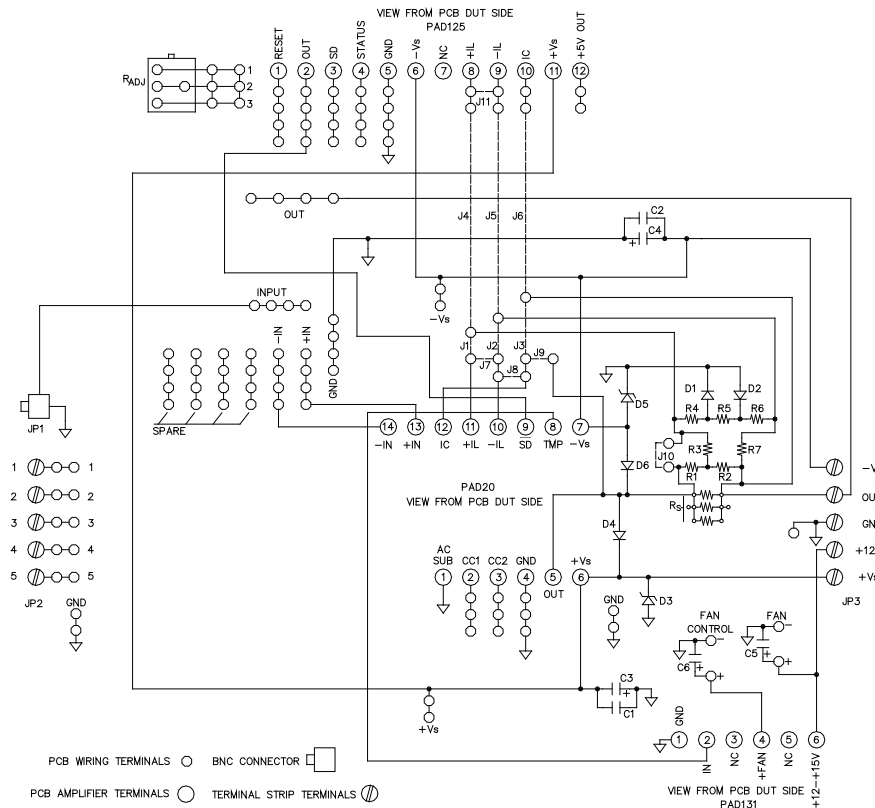

JUMPER SELECTION

Option 1: To use the PAD20 alone **without** fold-over current limit insert jumpers J1, 3, 7, 10 only (jumpers pre-installed for this option).


Option 2: To use the PAD20 alone **with** fold-over current limit use jumpers J1, 2, 3 only.

Option 3: To use the PAD20 and PAD125 together **without** fold-over current limit insert jumpers J4, 6, 7, 8, 9, 10, 11 only.

Option 4: To use the PAD20 and PAD125 together **with** fold-over current limit insert jumpers J4, 5, 6, 7, 8, 9 only.

Refer to the **PAD Power™** Excel spreadsheet (available for download from the website) for assistance in calculating resistor values for fold-over current limiting.

ASSEMBLED EVAL20 WITH OPTIONAL PAD131 AND PAD125 MODULES

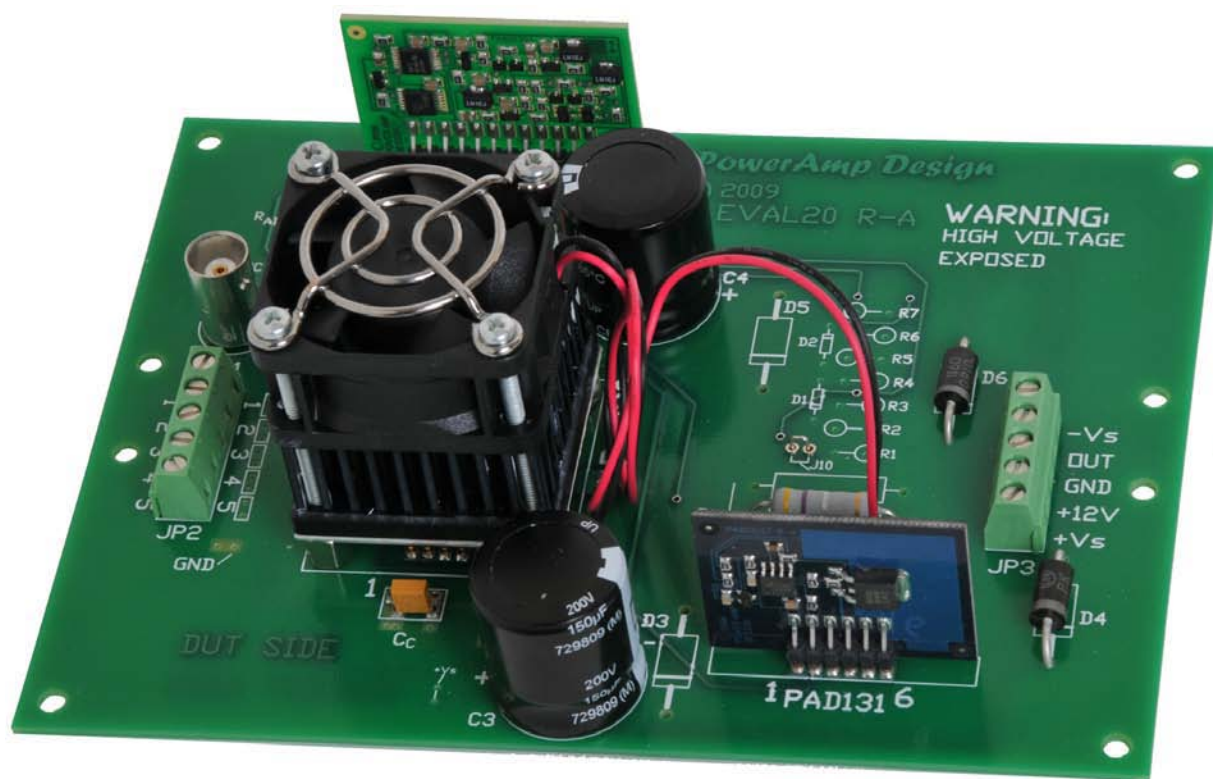

PowerAmp Design ♦ EVAL20 ♦ EVALUATION KIT FOR PAD20

Ø0.149
[Ø3.80]
4 PLACES

6.400
[162.56]
6.010
[152.65]

4.800 4.410
[121.92][112.01]

0.000

INCHES
[MM]

1 PAD123 12

PowerAmp Design
© 2009
EVAL20 R-A

WARNING:
HIGH VOLTAGE
EXPOSED

RAD1
BNC INPUT SIG
SPARE
INPUT SIG
GND
OUT
J1
J2
J3
J4
J5
J6
J7
J8
J9
J10
J11
J12
J13
J14
J15
J16
J17
J18
J19
J20
J21
J22
J23
J24
J25
J26
J27
J28
J29
J30
J31
J32
J33
J34
J35
J36
J37
J38
J39
J40
J41
J42
J43
J44
J45
J46
J47
J48
J49
J50
J51
J52
J53
J54
J55
J56
J57
J58
J59
J60
J61
J62
J63
J64
J65
J66
J67
J68
J69
J70
J71
J72
J73
J74
J75
J76
J77
J78
J79
J80
J81
J82
J83
J84
J85
J86
J87
J88
J89
J90
J91
J92
J93
J94
J95
J96
J97
J98
J99
J100
J101
J102
J103
J104
J105
J106
J107
J108
J109
J110
J111
J112
J113
J114
J115
J116
J117
J118
J119
J120
J121
J122
J123
J124
J125
J126
J127
J128
J129
J130
J131
J132
J133
J134
J135
J136
J137
J138
J139
J140
J141
J142
J143
J144
J145
J146
J147
J148
J149
J150
J151
J152
J153
J154
J155
J156
J157
J158
J159
J160
J161
J162
J163
J164
J165
J166
J167
J168
J169
J170
J171
J172
J173
J174
J175
J176
J177
J178
J179
J180
J181
J182
J183
J184
J185
J186
J187
J188
J189
J190
J191
J192
J193
J194
J195
J196
J197
J198
J199
J200
J201
J202
J203
J204
J205
J206
J207
J208
J209
J210
J211
J212
J213
J214
J215
J216
J217
J218
J219
J220
J221
J222
J223
J224
J225
J226
J227
J228
J229
J230
J231
J232
J233
J234
J235
J236
J237
J238
J239
J240
J241
J242
J243
J244
J245
J246
J247
J248
J249
J250
J251
J252
J253
J254
J255
J256
J257
J258
J259
J260
J261
J262
J263
J264
J265
J266
J267
J268
J269
J270
J271
J272
J273
J274
J275
J276
J277
J278
J279
J280
J281
J282
J283
J284
J285
J286
J287
J288
J289
J290
J291
J292
J293
J294
J295
J296
J297
J298
J299
J300
J301
J302
J303
J304
J305
J306
J307
J308
J309
J310
J311
J312
J313
J314
J315
J316
J317
J318
J319
J320
J321
J322
J323
J324
J325
J326
J327
J328
J329
J330
J331
J332
J333
J334
J335
J336
J337
J338
J339
J340
J341
J342
J343
J344
J345
J346
J347
J348
J349
J350
J351
J352
J353
J354
J355
J356
J357
J358
J359
J360
J361
J362
J363
J364
J365
J366
J367
J368
J369
J370
J371
J372
J373
J374
J375
J376
J377
J378
J379
J380
J381
J382
J383
J384
J385
J386
J387
J388
J389
J390
J391
J392
J393
J394
J395
J396
J397
J398
J399
J400
J401
J402
J403
J404
J405
J406
J407
J408
J409
J410
J411
J412
J413
J414
J415
J416
J417
J418
J419
J420
J421
J422
J423
J424
J425
J426
J427
J428
J429
J430
J431
J432
J433
J434
J435
J436
J437
J438
J439
J440
J441
J442
J443
J444
J445
J446
J447
J448
J449
J450
J451
J452
J453
J454
J455
J456
J457
J458
J459
J460
J461
J462
J463
J464
J465
J466
J467
J468
J469
J470
J471
J472
J473
J474
J475
J476
J477
J478
J479
J480
J481
J482
J483
J484
J485
J486
J487
J488
J489
J490
J491
J492
J493
J494
J495
J496
J497
J498
J499
J500
J501
J502
J503
J504
J505
J506
J507
J508
J509
J510
J511
J512
J513
J514
J515
J516
J517
J518
J519
J520
J521
J522
J523
J524
J525
J526
J527
J528
J529
J530
J531
J532
J533
J534
J535
J536
J537
J538
J539
J540
J541
J542
J543
J544
J545
J546
J547
J548
J549
J550
J551
J552
J553
J554
J555
J556
J557
J558
J559
J560
J561
J562
J563
J564
J565
J566
J567
J568
J569
J570
J571
J572
J573
J574
J575
J576
J577
J578
J579
J580
J581
J582
J583
J584
J585
J586
J587
J588
J589
J590
J591
J592
J593
J594
J595
J596
J597
J598
J599
J600
J601
J602
J603
J604
J605
J606
J607
J608
J609
J610
J611
J612
J613
J614
J615
J616
J617
J618
J619
J620
J621
J622
J623
J624
J625
J626
J627
J628
J629
J630
J631
J632
J633
J634
J635
J636
J637
J638
J639
J640
J641
J642
J643
J644
J645
J646
J647
J648
J649

PowerAmp Design ♦ EVAL20 ♦ EVALUATION KIT FOR PAD20