

EVALUATION KIT FOR MODEL PAD195

EVAL195

Rev B

INTRODUCTION

The EVAL195 evaluation kit provides a convenient method to become familiar with the operation of amplifier model PAD195 before your application circuit is committed to production. Some assembly is required since user selections are needed depending on the application. For example, a current limit resistor value needs to be selected by the user. Also, there are two PCB mounting options available.

Critical connections for power supply bypassing and compensation are pre-wired. Terminal strips are also provided for input and output signals and power. A bread-boarding area is provided to construct the application circuit.

ASSEMBLY STEPS

Please note that the #1 cause of problems for evaluation kit users is not reading and following the directions (all of them). The #2 cause of problems is poor solder joints (cold or bridging). Don't become a statistic. ✓ each step.

Refer to the Illustrated Parts List for the components mentioned in the assembly steps.

- □ 1. This evaluation kit is intended for use by professional engineers well familiar with the concerns of high voltage circuits. Be constantly aware that there are places on the circuit board where as much as 1000V may be exposed. On the circuit board these nodes are marked with a Δ symbol. Do not touch the circuit board unless you are sure the power supplies are turned off. Do not attach probes to the circuit unless the power is turned off. Be sure that any probes attached to the circuit can withstand 1000V. Do not leave the circuit unattended while powered up. While we have designed the board to be as safe as practical it is still your responsibility to guard your safety and that of others.
- ☐ 2. Notice that the printed circuit board (PCB) is labeled on one side as the "DUT SIDE" and the other side as "CIRCUIT" side.
- □ 3. Standard 1% metal film resistors may be used for the current limit sense resistor, Rs (not included in the kit but required for proper operation). There are two locations on the PCB for these resistors. The PCB ties the locations in parallel. The resistors can be used individually at either location or two can be used to fine tune the final value desired. See the datasheet for the amplifier to determine the best value for your application. Solder the resistor(s) from the "CIRCUIT SIDE" of the PCB.




Assembled EVAL195 with amplifier installed.

- ☐ 4. The evaluation kit PCB can be mounted in two ways. Option 1- Chassis mount. Use #6 standoffs and screws (not supplied) attached to the PCB at the four corners of the PCB.
- **Option 2- Bench-top mount.** Use the five rubber bumpers supplied. These are "stick-on" components. Remove the release paper from each bumper and apply the bumper to the square outlines on the "CIRCUIT SIDE" of the PCB.
- \Box 5. Remove the 4 hex nuts from the mounting spacers of the amplifier.
- □ 6. Align the 4 studs of the mounting spacers with the mounting holes in the PCB. Be sure that the amplifier's pin 1 aligns with pin 1 on the PCB. Slowly lower the amplifier into the PCB, making sure that the pins of the amplifier and the cage jacks mate. Push the amplifier into the PCB until the mounting spacers meet the PCB.
- □ 7. Fasten the amplifier to the PCB with the 4 hex nuts previously removed. Do not over-tighten the nuts as this may strip the mounting studs. The provided plastic nut starter can assist you here.
- \square 8. Notice that "R_f" is a 1 MΩ high voltage rated resistor. As much as 1000V may appear across this resistor and that much voltage may destroy normally rated components. If you need to replace this resistor with a component of some other value pay special attention to the voltage rating of that component.
- \square 9. Use the bread-boarding area to add the external components necessary to program the amplifier gain (noting that Rf is $1M\Omega$) and other circuit requirements to evaluate your application circuit. You can use the evaluation kit schematic and PCB views to map out your circuit.



1



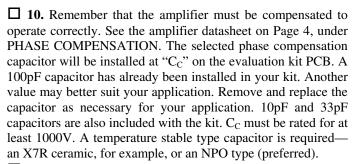

- □ 11. The evaluation kit assembly is complete. Be sure you have read and followed all the assembly steps. Inspect the circuit board for solder shorts or poor solder joints. An illuminated magnifier is helpful. It is also helpful to use a solder with a water soluble flux and to wash and dry the board after your assembly is complete.
- □ 12. Note that the EVAL195 is intended for use in a lab type environment with normal atmospheric pressure, normal temperature and humidity conditions. Operation in other types of environments may lead to high voltage arching across circuit boards traces or circuit elements. The amplifier circuit itself is conformal coated except for the leads where the amplifier is connected to the user's circuit board.
- ☐ 13. Before applying power to your circuit set the power supply for ±50V and set the power supply current limit to approximately 20mA. Use little or no load at first. Apply an input signal and check the output with an oscilloscope to verify proper functionality. This step can prevent damaging the amplifier or the circuit board should there be some mistake in assembly.





ILLUSTRATED PARTS LIST


Note that the amplifier is purchased separately.

| ✓ | Ref | Qty | Description | Mfg/Distributor | Mfg. Part Number | Illustration (not to scale) |
|---|-----------------------------|-----|---|-------------------|----------------------|-----------------------------|
| | Amplifier Pins 1-14 & Cc | 1 | Cage Jacks w/carrier strip 32 wide | Power Amp Design | CJS01 | CARHER STRIP |
| | C1, 2 | 2 | Polyester Film Capacitor, 0.33µF, 1000V | Kemet/Mouser | MMK22.5334K1000D16L4 | |
| | Rf | 1 | HV Resistor, 1MΩ | Ohmite/Mouser | SM103031004FE | |
| | JP1 | 1 | BNC Jack | AMP/Digi-Key | 5221123-2 | 0- |
| | JP2 | 1 | Terminal Block | Phoenix/Digi-Key | 1729157 | THE REAL PROPERTY. |
| | JP3 | 4 | Terminal Block | Phoenix/Mouser | 1714955 | 四国 |
| | Сс | 1 | Capacitor, 100pF 1kV | Vishay/Mouser | 562R10TST10 | |
| | Сс | 1 | Capacitor, 33pF 1kV | Vishay/Mouser | 561R10TCCQ33 | |
| | Сс | 1 | Capacitor, 10pF 1kV | Vishay/Mouser | 561R10TCCQ10 | |
| | D4, 6 | 2 | Diode, Fast Recovery | Vishay/Mouser | RGP02-20E-E3/54 | |
| | NA | 5 | Rubber Bumper | 3M/Digi-Key | SJ5518 | \Diamond |
| | NA | 1 | Nut Starter | Menda/Jensen Tool | 200 | |
| | NA | 1 | PCB | Power Amp Design | EVAL195 R-A | NA |





CIRCUIT DIAGRAM

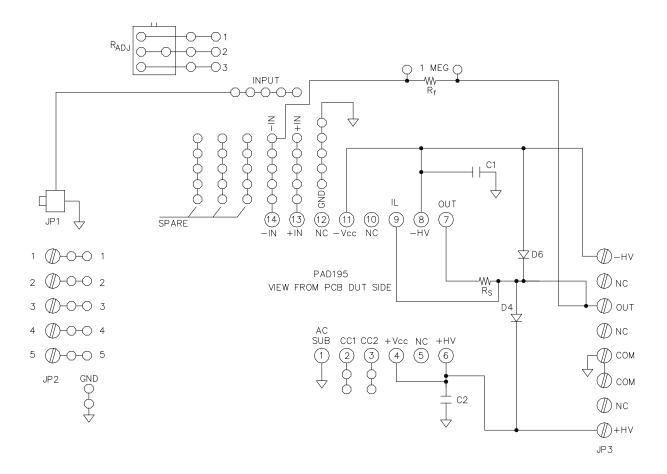


PCB WIRING TERMINALS () BNC CONNECTOR PCB AMPLIFIER TERMINALS () TERMINAL STRIP TERMINALS (//)






TOP VIEW

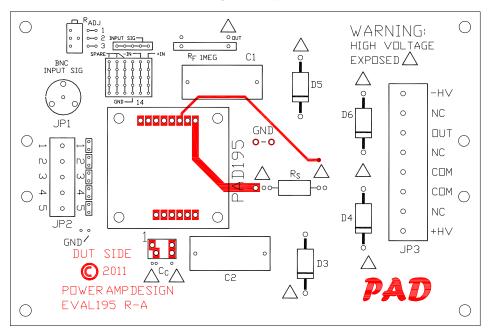

BOTTOM VIEW

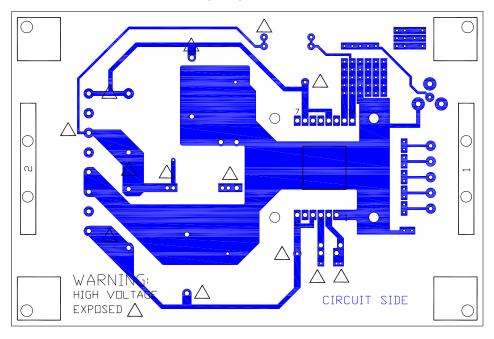




Rietbachstrasse 7, 8952 Schlieren (ZH) Switzerland



ASSEMBLED EVAL195 WITH AMPLIFIER INSTALLED

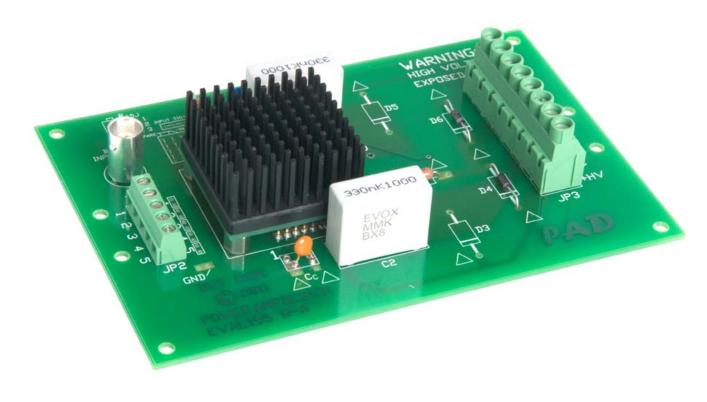



BOARD OUTLINE DIMENSIONS

